



PRESSURE-FIT FRAME INSTALLATION DETAILS

Pressure-fit frames are designed for installation in existing prepared openings and are to fit tightly around the wall with minimal frame throat to wall clearance.


A new rough opening should be 1" to 1¹/₄" wider on each side than the actual door width and 1" to 1¹/₂" taller than the door opening height.

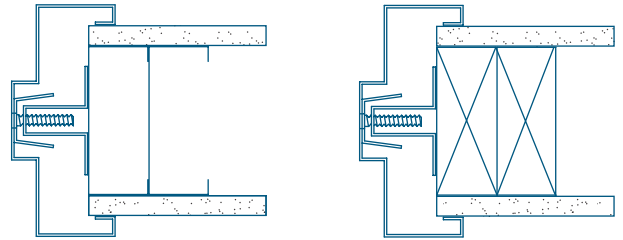


Pressure-fit frames are provided with compression anchors which are located near the top of each jamb.

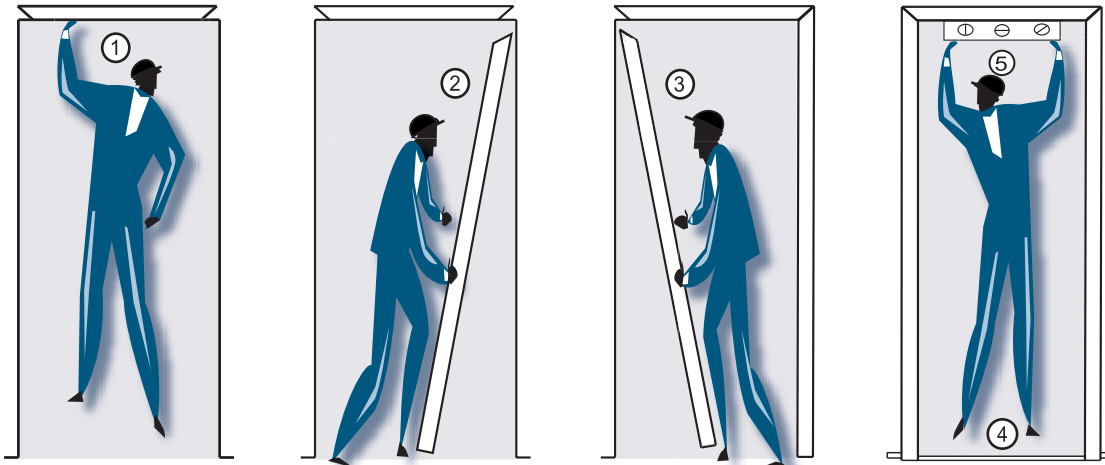

- 1) Place head in opening and push upward as far as possible.
- 2) Install either jamb and engage jamb clips in corresponding slots in head.
- 3) Install second jamb in same manner and position frame in opening.
- 4) Place a wood spreader (cut to the exact opening width) at floor level.
- 5) Level the head and attach the base anchors.
- 6) Adjust compression anchors to plumb the frame in the opening.

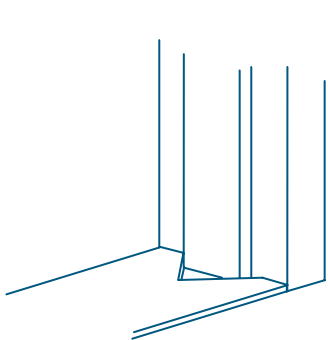

WOOD SPREADER

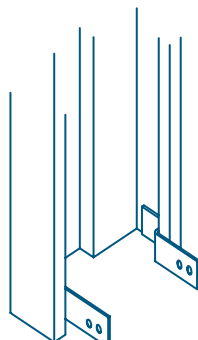

BASE ANCHORS

MPI

319 North Hills Road
Corbin, KY 40701
Phone: 606-523-0461
FAX: 606-528-6959
www.mpigroupllc.com